



WL Stick Datalogger Quick Installation Manual

Version: 1.2



Delivery Content


- 1 WL stick
- 1 Quick Installation Manual

1 Install

1.1 Install the network cable

Step1: Remove the “Plastic Nut”, “Thread Clamp Claw”, and “Sealing Ring” in turn.

Step2: Pass the network cable plug through the “Plastic Nut”, “Thread Clamp Claw”, and “Sealing Ring” (with opening) in the direction as shown in the figure below.


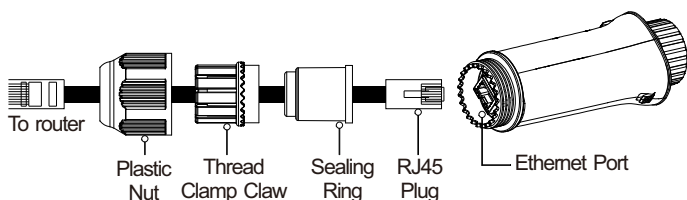


Step3: Fully embed the “Sealing Ring” into the “Thread Clamp Claw”.

Step4: Connect the “RJ45 Plug” to the datalogger and tighten the “Plastic Nut”.

NOTE

Due to limited space, only RJ45 plug without protective shell can be used.

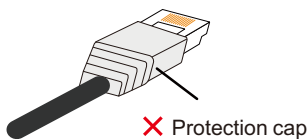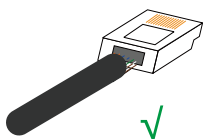

The diameter of the network cable connection end on the data logger is about 3.5mm after it is completely fastened. The network cable is required to be circular or oval, and the diameter of the network cable needs to be greater than 4mm in order to be properly sealed.

1.2 Install the datalogger

Connect the datalogger to the corresponding 4-pin COM port of the inverter. A Solis 5K inverter is used here as an example.

Please follow the instructions below:



Match the joint

Install the datalogger:

Step 1: Match the joint, and then insert the datalogger to the inverter COM port.

Step 2: Rotate the black ring in clockwise.



1




2

NOTE

Only rotate the black ring at the connection end, not rotate the main body.

1.3 Install with multiple inverters

If you need to collect data from multiple inverters, please follow the inverter user manual to establish a communication connection with the inverter using the RS485 communication cable in a "hand in hand" manner.

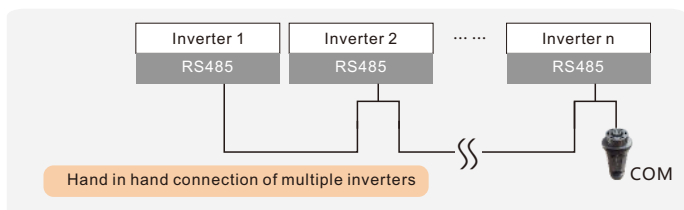

After the datalogger is installed on the inverter, if the inverter is powered on, you need to set the inverter slave address, the default slave address of the inverter is 01, and each inverter on the communication circuit needs to be assigned with different slave address different slave address(like 01, 02, 03, 04...).

NOTE

The device must be installed away from the strong magnetic field produced by large electrical appliances such as microwave oven, refrigerator, telephone, metal walls, etc. Otherwise, the communication quality may be affected. It may also be affected by lightning storm.

2 LED and Button

LED Lights Status:

LED indicators	Description	LED Status	Meanings
Internet Indicators ● (NET)	Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server
		ON	Successfully connected
		OFF	Abnormal connection
Inverter COM Indicators ● (COM)	Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter
		ON	Successfully connected
		OFF	Abnormal connection
Power Indicator ● (PWR)	Shows the power supply status of the datalogger.	ON	Datalogger is powered up normally
		OFF	Datalogger is powered up abnormally

Button Instruction:


The [RESET] button on the front is used for connection.

- Short press will send the data immediately.
- Long press for over 10 seconds until only the red light is on will reset the connection.

The three constantly ON LED lights indicate the datalogger is working normally.

3 LAN Configuration


After the datalogger is connected to the router through the network cable, LAN Configuration is completed.

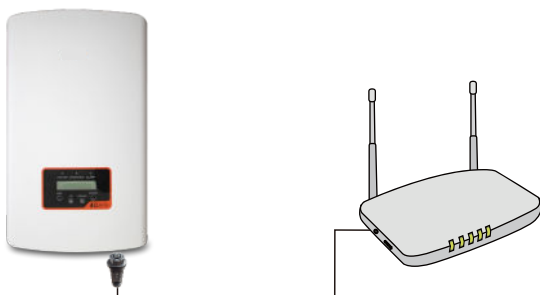

NOTE

WL Stick automatically obtains IP by default and connects to the network. If the datalogger fails to connect to the network, please perform the following steps to set the IP address. Otherwise, skip the following steps.

Step 1: The wireless device (mobile phone or laptop) connects to the datalogger hotspot (Solis_serial number). The default password is [123456789](#).

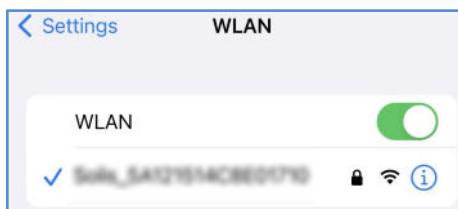

Step 2: Enter **10.10.100.254** in the web browser, open the following configuration interface.
Enter Username **Admin** and Password **123456789**.

Sign in

http://10.10.100.254

Your connection to this site is not private

Username: admin

Password: *****

Sign in Cancel

Step 3: Select the “WAN port setting” and “Static IP”. Enter IP address, Subnet mask, Gateway address, DNS server address for network cable. Then click “Save”.

Internet access mode ☐ Dynamic IP ☒ Static IP

Applicable to fixed IP address Internet users

IP address:

Subnet mask:

Gateway:

DNS server:

Alternate DNS server: (optional)

Save

Step 4: The following interface pops up to indicate that the setting is successful. Otherwise please try LAN configuration again.

WinBox 3.16.1

Help

Status

Quick Set

WAN port setting

Advanced

Restart

Reset

Set successfully

4 WiFi Configuration

Step 1: Use you phone to scan the QR code to download and register the Solis Cloud APP. Or directly download from APP Store or Google Play Store by searching "Solis Cloud".



Step 2: If it is a new datalogger, please configure it first, then click the "[WiFi Configuration](#)".

Register

Hello,
Welcome to Solis

Username/Email


Password 

☐ Remember Forget Password

Log in


Language | **More Tools** | Data Migration

Unlogged account, click on "More Tools" and select "WiFi Configuration"

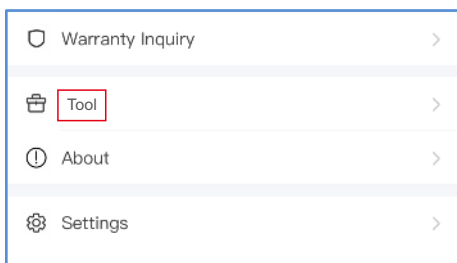


If you have logged in, please click "Tool" to enter "WiFi Configuration"

Step 3: Manually input datalogger SN or Scan the SN on the datalogger.

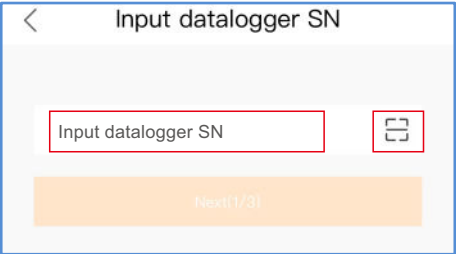

Step 4: Choose the configuration method, recommended click "[Browser Configuration](#)".

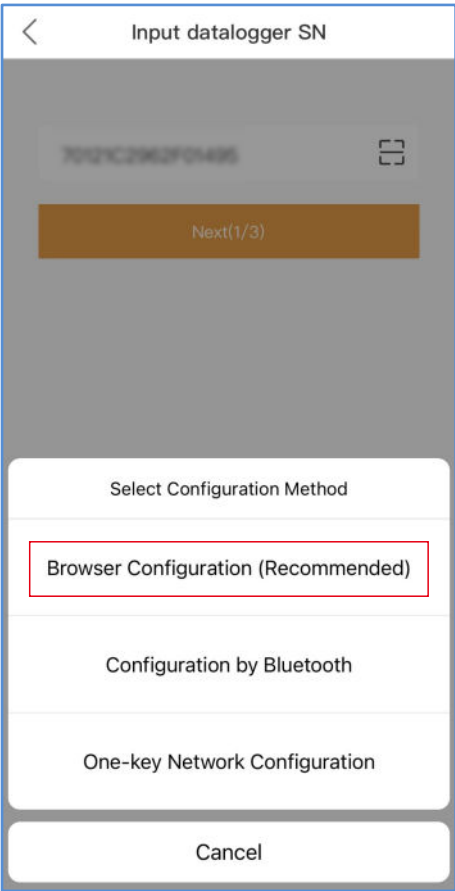

Step 5: Make sure that the green light flashes at intervals, then click the "[I'm sure it is flashing](#)".



Configuration Tip




Please turn on the configuration mode of the datalogger

Plug the datalogger into the inverter and wait for the indicator light of the datalogger to be stable. That means, the red light on the datalogger keeps on, and the green light flashes every second, as shown in the figure above. Then you can start connecting to the WiFi signal of the logger, click to "[view the tutorial](#)":

- (1) Make sure that the green light of the datalogger flashes at intervals. If the WiFi signal is not found, try re-plug the datalogger;
- (2) If the WiFi signal still can not be found, please long-press the datalogger for over 10 seconds to restore to the default setting, wait for the indicator light of the datalogger to be stable, and click to [view the tutorial](#);
- (3) If the datalogger is connected to the network, but the network needs to be changed, please follow the method 2
- (4) If the network is not found after multiple attempts of the above methods, please replace the datalogger.

I'm sure it is flashing

Step 6: Connect to the datalogger hotspot (Solis_serial number).

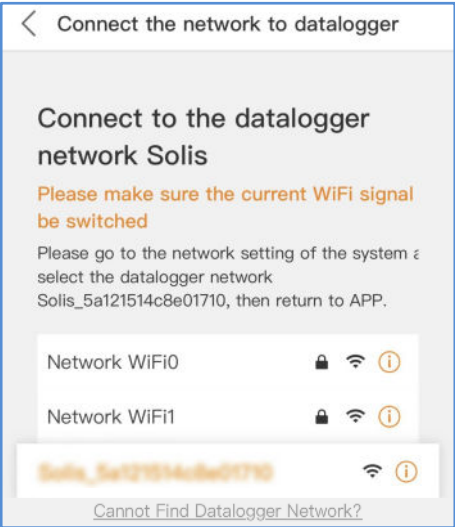

Step 7: The default password is 123456789.



After that, return to APP.

Step 8: Click “➤”, make sure the phone is connected to router WiFi and switch back to the page to fill in the WiFi password, then move to next step.

Connect to Router

Click to connect router 

Input router's password

Next(2/3)

Step 9: Configuration Complete.

Configuration Complete



Configuration Complete

OK(3/3)

The setting is succeeded, the logger will try to connect to the corresponding WiFi source.

Note:


1. It takes about 1 minute for the datalogger to connect to the Internet. If the green indicator light on the logger is always on, it means that the logger is rightly connected to the Internet.
2. If the green indicator light of the logger keeps flashing after 1 minute, please try reset it again.

For more help or other questions, please check the installation manual or contact the local distributor for help.

5 Change the Password


For security reasons, you are advised to change the password of the datalogger hotspot, which is also the login password of the website 10.10.100.254.

Step 1: The wireless device (mobile phone or laptop) connects to the datalogger hotspot (Solis_serial number). The default password is [123456789](#).

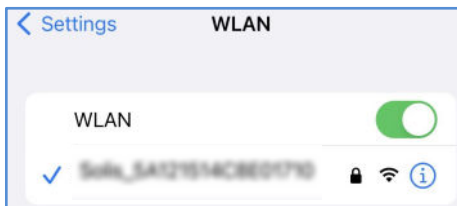


Step 2: Enter 10.10.100.254 in the web browser when the router is not connected, open the following configuration interface.

Enter Username [admin](#) and Password [123456789](#).

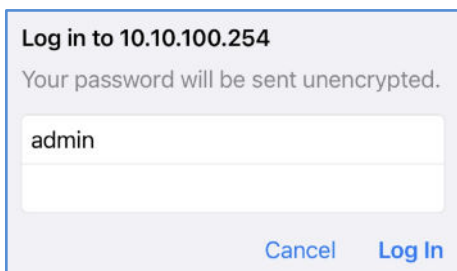


Step 3: Select the "[Advanced](#)", enter the new password and then click the "[Save](#)".

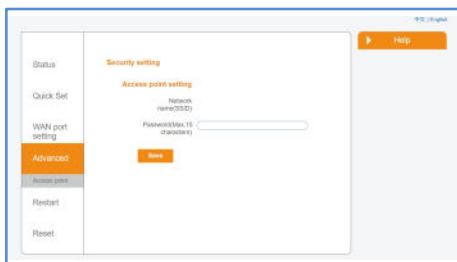


6 Create the Solis Cloud Account

Step 1: Click the “[Register](#)”.

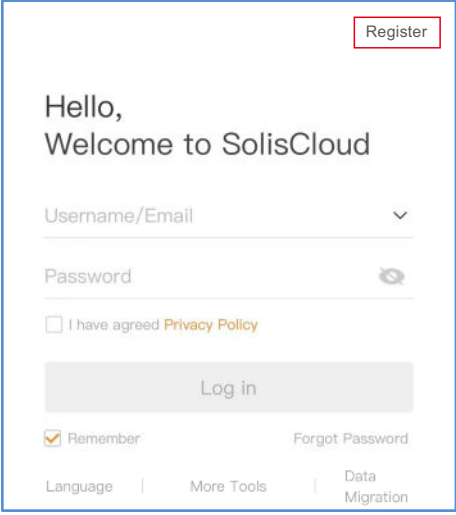

The image shows a web form for logging in or registering on SolisCloud. At the top right, there is a red-outlined button labeled "Register". Below this, the text "Hello, Welcome to SolisCloud" is displayed. The form contains two input fields: "Username/Email" with a dropdown arrow and "Password" with an eye icon for toggling visibility. Below the password field is a checkbox labeled "I have agreed" followed by a link to the "Privacy Policy". A grey "Log in" button is positioned below the checkbox. At the bottom left, there is a checked "Remember" checkbox. At the bottom right, there is a link for "Forgot Password". The footer includes links for "Language", "More Tools", and "Data Migration".

Step2: Select Owner or Organization for email address registration.

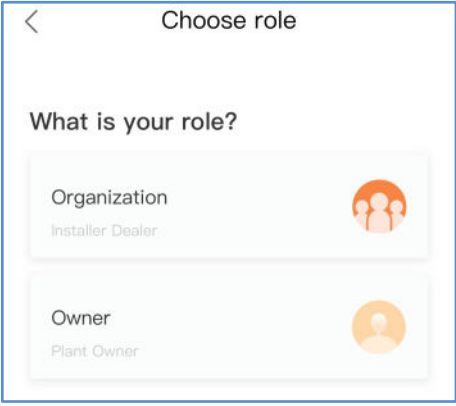

The image shows a mobile app screen titled "Choose role" with a back arrow on the left. The question "What is your role?" is displayed. There are two selectable options: "Organization" with the subtext "Installer Dealer" and an icon of three people, and "Owner" with the subtext "Plant Owner" and an icon of a single person. Both options are enclosed in light grey rounded rectangles.

Step3: Enter the email to get the verification code, than enter your account and password, last click the "Register".

<

Owner

* Registration Method

Input email

Input verification code

Send

* User Name

Input 2 to 60 English letters, not pure n...

* Password

Input 6 to 32 letters, symbols and...

* Time Zone

(UTC+08:00) PRC

>

☐ * I have agreed [Privacy Policy](#)

Register

Owner Register



Organization

Note: If your organization has registered an account in SolisCloud, you do not need to register again. Please contact the administrator to add you as a sub-organization or member in organization management.

* Organization (Company) Name

Input 2 to 60 characters

* Registration Method

Input email

Input verification code

Send

* User Name

Input 2 to 60 English letters, not pure n...

* Password

Input 6 to 32 letters, symbols and...



* Organization Code

541248



* Time Zone

(UTC+08:00) PRC




☐ * I have agreed [Privacy Policy](#)

Register

Organization Register

7 Create Plant

Step1: Enter the main page of Solis Cloud APP, click “+” at the top right corner and select "Add plant" .

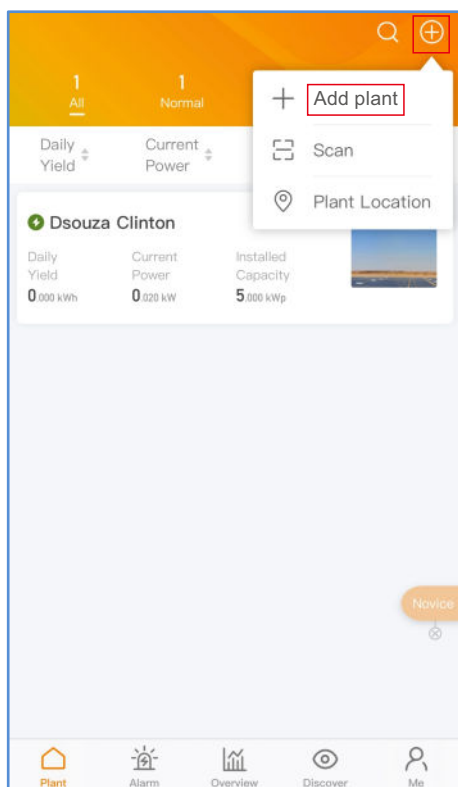

Step 2: Input the information of the plant as required.
Then click "Done".

Create Plant

Done

*

Plant Name

Input plant name

*

Installed Capacity(kWp)

Installed Capacity

*

Area

Location 

*

Plant Address

Input detailed address

*

Earning per kWh

Input Earning per kWh

Organization Code

Input Organization Code >

Add Guest 



Installer Phone

Input installer phone

Installer Email

Input installer's email

Module

Input number of modules

Plant Type

Residential >

Grid Connection Type



Entire Energy to Grid >

*

Time Zone

-- >

*

Currency

-- >

Step 3: Confirm the plant information.
Click "[Create plant](#)".

Create plant

Plant Name: test

Rated Power(kWh): 5

Location: China Zhejiang Ningbo

Plant Address: Ningbo Ginlong Technologies Co.,Ltd.

Currency: CNY

Earning per kWh(CNY/kWh): 0.3949

Inclination: 30

Timezone: (UTC-12:00) Sun Line West

Installatior: 2020-04-03

[Cancel](#) [Create plant](#)

Step 4: Click "[View plant](#)" to enter the plant homepage , then add the datalogger.

Create successfully

[View plant](#)

No collector was added,
please add a collector

[Cancel](#) [Add](#)


Step 5: Scan the SN number of the datalogger or manually input it.



Note: Scan the **datalogger SN**, NOT the **inverter SN**.



Step 6: Plant creation succeeds. Click "[Continue...atalogger](#)" to check the monitoring data. If the plant has multiple dataloggers, please click "[View Plant](#)".

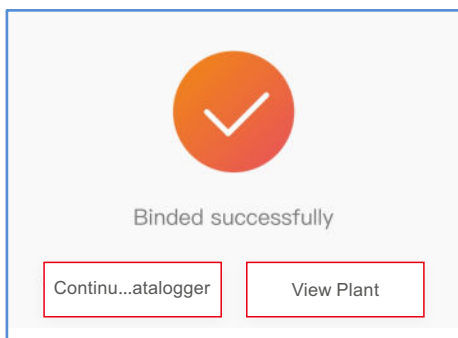

8 FCC Certification

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Contact

Please contact us if you have any technical problems in terms of the product. Please provide the following information as well:

- ◆ Inverter SN
- ◆ Datalogger SN
- ◆ Problem Description

Ginlong Technologies Co., Ltd.

No. 57 Jintong Road, Binhai Industrial Park,
Xiangshan, Ningbo, Zhejiang, 315712, P.R.China.

Tel: +86 (0)574 6578 1806

Fax: +86 (0)574 6578 1606

Email : info@ginlong.com

Web : www.ginlong.com